



ER236270 FUNCTION SWITCH
SHOWN IN POS 1

- POS 1 PHONO & TAPE
- 2 PHONO - CRYSTAL
- 3 TUNER
- 4 TAPE HI-LEVEL

ER2362700 MODE SWITCH
SHOWN IN POS 1

- POS 1 STEREO 1 MAL
- 2 STEREO REVERSE
- 3 MONAURAL RIGHT
- 4 MONAURAL LEFT

* RESISTANCE CHART

TUBE	1	2	3	4	5	6	7	8	9
V1 12AX7	—	100K	1800	200	200	—	100K	1800	200
V2 12AU7	—	10M	0	200	200	—	10M	0	200
V3 12AU7	—	1M	1200	200	200	—	1M	1200	200
V4 12AX7	—	10M	150K	200	200	300K	200K	6.5K	200
V5 12AX7	—	10M	150K	200	200	300K	200K	6.5K	200
V6 EL84	470K	470K	200	200	200	00	—	—	—
V7 EL84	470K	470K	200	200	200	00	—	—	—
V8 EL84	470K	470K	200	200	200	00	—	—	—
V9 EL84	470K	470K	200	200	200	00	—	—	—
V10 6Z34	—	—	00	280	00	00	280	—	—

* FUNCTION SW IN PHONO/TAPE
MODE SW IN STEREO NORMAL
BALANCE CONTROL CENTERED
TUNE'S C MAX. GAIN
TUNE'S C L SW IN PARALLEL
E CONTR LAT

NOTE:
UNLESS OTHERWISE SHOWN
ALL RESISTORS 1/2 WATT ±20%
ALL CAPACITOR VALUES WITH DECIMAL TO BE PAPER IN MFD
ALL CAPACITOR VALUES WITHOUT DECIMAL TO BE GENERAL PURPOSE CERAMICS 500VDC IN MMF
ALL VOLTAGES ARE DC
ALL RESISTANCES ARE IN OHMS

S257
S236284C

